




R/L

eh

**ERKUL**<sup>®</sup>  
Products & Quality

**FORD CUSTOM**  
2012 →  
**SKYPORT ROOF RAIL**

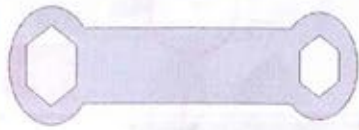


(x1)



(x2)



M8x25 (x2)  
for middle

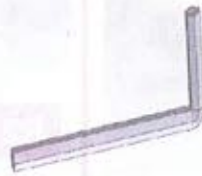


(x1)



M8x45 (x2) for front  
M8x40 (x2) for rear



(x4)

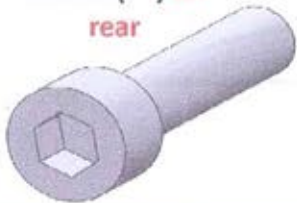

M8 (x6)



# instructions

**FRONT**

**MIDDLE**

**REAR**



F1



M1



R1



F2



M2



R2



Cıvataları  
sıkmadan önce  
silikon sıkın.

Put the cilcon  
before tighten  
up to the  
screws.

